

## MR2000U JUMPER SETTING

- **T1 : Track1 Select**  
Short : Enable  
Open : Disable
- **T2 : Track2 Select**  
Short : Enable  
Open : Disable
- **T3 : Track3 Select**  
Short : Enable  
Open : Disable
- **J1 : Lead/End Code Select**  
Short : Disable  
Open : Enable
- **J2 : Alt-Num Select**  
Short : Disable  
Open : Enable
- **J3 : ISO/JIS-II Select**  
Short : ISO  
Open : JIS-II
- **JP2 :**  
Pin 1-2 Short : Alt-Num Disable  
Pin 1-2 Open : Alt-Num Enable  
Pin 3-4 Short : Num Lock Disable  
Pin 3-4 Open : Num Lock Enable  
Pin 5-6 Short : BaudRate 9600  
Pin 5-6 Open : BaudRate 19200

Position	T1	T2	T3	J1	J2	J3
Function	Track1	Track2	Track3	Lead/End Code	ALT-Num	ISO/JIS2
Opened	Disable	Disable	Disable	Enable	Enable	ISO
Closed	Enable	Enable	Enable	Disable	Disable	JIS2

JP2	1-2	3-4	5-6	7-8	9-10	11-12
Function	ALT-Num	NumLock	BaudRate	Class	DOS/Windows	Reserved
Opened	Enable	Enable	19200	Vendor ( Linux )	DOS	Reserved
Closed	Disable	Disable	9600	HID	Windows	Reserved

